



Tech 4 Kids Inc.
1200 Aerowood Drive, Unit 28
Mississauga, ON L4W 2S7
Phone: 905-629-3836
Fax: 905-629-1029

Recall of Snow MX at US BRP dealers

Unsold units.

1. Tech 4 Kids will be contacting you within the week to ascertain the number of units on hand you have. If you wish to contact us before this call, please email toys@tech4kids.com or call us at 1-800- 359-6088
2. Depending on where you are located and the number of units you have, you will be asked to either destroy the units or prepare the units for collection by their courier.
3. If you are asked to destroy the product, we ask you to cut open the packaging and take a photo as evidence of how many units you have destroyed.
4. Please email this photo to toys@tech4kids.com and please ensure to provide your dealer number, name and address. Upon receipt of the photo and your information, Tech 4 Kids will arrange a chq to be issued being US\$96.98 per unit.
5. If we are collecting your product, Tech 4 Kids will arrange the courier to collect and advise you of the day of the pickup. The goods will be going back to:-

Touchpoint Logistic
2300 Galvin Drive
Elgin, IL 60124
ph.847-836-9471
fax.847-836-9725

6. Once the goods have been collected, please send evidence of the signed bill of lading by email to toys@tech4kids.com and Tech 4 Kids will arrange for a chq to be issued, being US\$96.98 per unit.

Consumer returns the product to the store.

1. The customer must return the product to you for you to issue a refund. No refunds are to be issued unless you receive the product from the consumer. The amount of the refund is dependent on your own policies and whether they have a receipt.
2. We are asking that the dealer destroys this returned product. To do this, please use a marker to label the ski with your store number and a unique number. Please take a photo of the product returned and email it to toys@tech4kids.com together with your dealer name, number and address.
3. Tech 4 kids will arrange for a chq to be issued being US96.98 per unit.




Thank you for purchasing the Snow MX. You will find inside a replacement Front Ski which you will need to install before further using your Snow MX. Please follow the below instructions step by step to remove the original ski and replace with the new Front Ski. The new ski is easily identifiable as it has been molded in a more durable material that is grey in color. If you have questions please visit www.snowmx.com or contact us at toys@tech4kids.com or call 1-800-359-6088.

Merci d'avoir acheté un Snow MX. Vous trouverez à l'intérieur un ski avant de rechange que vous devrez installer avant d'utiliser votre Snow MX. Veuillez suivre les instructions ci-dessous pour enlever le ski d'origine et le remplacer par le neuf. Le ski de rechange est facilement reconnaissable car il est moulé dans un matériau gris plus durable. Pour toute question, veuillez visiter www.snowmx.com ou nous contacter à toys@tech4kids.com ou au 1-800-359-6088.


PARTS / PIÈCES

REPLACEMENT PARTS INCLUDED PIÈCE DE RECHANGE COMPRISSE

NEW FRONT SKI
LA NOUVELLE
SKI AVANT

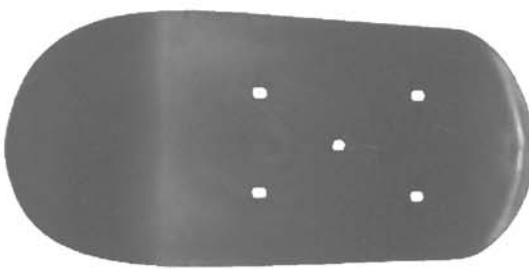

INCLUDED IN THE ORIGINAL SNOW MX PACKAGE INCLUS DANS L'ORIGINAL SNOWMX DU PAQUET

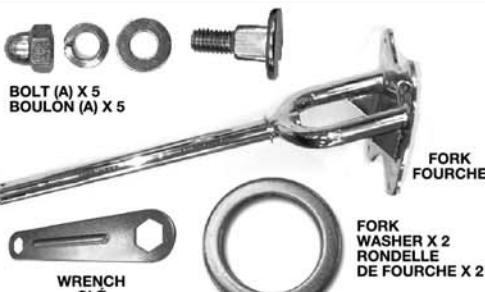

STEP 1 / ÉTAPE 1


Loosen the locknuts of each of the 5 holes in the Front Ski with the WRENCH that comes with the Snow MX. Remove the locknuts, follow by the washer and then remove BOLT (A) from the bottom of the ski. Remove the front ski from the Front Fork.

Desserez les 5 contre-écrous sur le ski avant avec la CLÉ fournie avec le Snow MX. Enlevez les contre-écrous, les rondelles puis enlevez les BOULONS (A) du dessous du ski. Dégagez le ski avant de la fourche avant.

STEP 2 / ÉTAPE 2

Line up the 5 holes in the NEW FRONT SKI replacement part with the 5 holes in the FRONT FORK. Insert BOLT (A) from the bottom of the ski up through the FRONT FORK plate and place the washer on top, followed by the locknut. Tighten the locknut securely with the WRENCH. Repeat step 2 for all 5 holes.

Aligner les 5 trous de la nouvelle SKI AVANT et les 5 trous de la FOURCHE AVANT. Insérer un BOULON (A) par le dessous de ski à travers la plaque de la FOURCHE AVANT, enfiler la rondelle puis le contre-écrou. Serrer le contre-écrou avec la CLÉ. Répéter l'étape 2 pour les 5 trous.

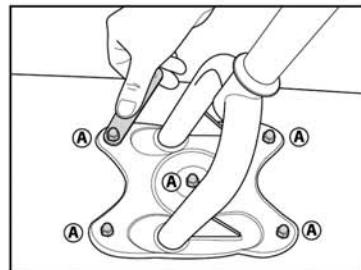

COMPLETED PRODUCT IMAGE IMAGE DE L'ARTICLE ENTIÈREMENT ASSEMBLÉ



©2011 Tech 4 Kids Inc. All Rights Reserved. / Tous droits réservés.
Imported and Distributed by / Importé et distribué par: Globe Dragon Technology Development Ltd.
Unit 901, East Ocean Centre, 98 Granville Road, Tsim Sha Tsui East, Kowloon, Hong Kong
For consumer inquiries please email us at: toys@tech4kids.com
Pour toutes questions se rapportant au produit, veuillez envoyer un courriel à: toys@tech4kids.com
Follow us on / Suivez nous sur: OEIndustries
Become a fan on / Devenez un fan sur Outer Edge Industries. OEIndustries
Product and colors may vary / Le produit et les couleurs peuvent changer.
PRINTED IN CHINA / IMPRIMÉ EN CHINE
WWW.OUTEREDGEINDUSTRIES.COM

SAFETY RECALL

Cracked and/or broken front ski tips can cause the skis to stop suddenly, posing a fall hazard to consumers.

Please discontinue use immediately.



Snow MX Ski-doo®

If you have purchased the Tech 4 Kids Outer Edge Snow MX Ski-doo®;
Please return it to the store where it was purchased for a refund.

Further information available from Tech 4 Kids at

1 866 287 4761 or visit our website
www.outeredgeindustries.com/safetynotice/

Thank you for your cooperation.

